

三菱社製 壁掛け金具対応表

2021/7/7

掲載がないテレビ型番については、対応確認をいたしますのでお問い合わせください

| サイズ (型) | テレビ型式 | EEX-TVKA003 | EEX-TVKA004 | EEX-TVKA005 | EEX-TVKA008 | EEX-TVKA011 | EEX-TVKA016 | EEX-TVKA013/014/015 | EEX-LA024/025 |
|---------------|---------------|---|---|---|---|---|--|---|---|
| | | 32~72型 | 32~65型 | 26~65型 | 23~55型 | 80型まで | 70型まで | 43型まで | 13~50型 |
| | |  |  |  |  |  |  |  |  |
| 65 | DSM-65L7 | ○ | ○ | ○ | × | ○ | ○ | × | × |
| | LCD-65LB7ZH | × | × | × | × | ○ | ○ | × | × |
| | LCD-65LBW6H | ○ | ○ | ○ | × | ○ | ○ | × | × |
| | LCD-65LBW7H | ○ | ○ | ○ | × | ○ | ○ | × | × |
| | LCD-65LS1 | ○ | × | × | × | ○ | × | × | × |
| | LCD-65LS3 | × | × | × | × | ○ | × | × | × |
| 58 | LCD-58LS1 | × | × | × | × | ○ | × | × | × |
| | LCD-58LS3 | × | × | × | × | ○ | × | × | × |
| | LCD-58LSR7 | × | × | × | × | × | × | × | × |
| | LCD-A58RA1000 | × | × | × | × | × | × | × | × |
| | LCD-A58RA2000 | × | × | × | × | × | × | × | × |
| | LCD-A58XS1000 | ○ | ○ | ○ | × | ○ | ○ | × | × |
| 50 | DSM-50L6 | ○ | ○ | ○ | ○ | ○ | ○ | × | ○ |
| | DSM-50L7 | ○ | ○ | ○ | ○ | ○ | ○ | × | ○ |
| | DSM-50L7X | ○ | ○ | ○ | ○ | ○ | ○ | × | ○ |
| | LCD-50LSR6 | × | × | × | × | × | × | × | × |
| | LCD-50ML7H | ○ | ○ | ○ | ○ | ○ | ○ | × | ○ |
| | LCD-A50BHR7 | × | × | × | × | × | × | × | × |
| | LCD-A50BHR8 | × | × | × | × | × | × | × | × |
| | LCD-A50RA1000 | × | × | × | × | × | × | × | × |
| | LCD-A50RA2000 | × | × | × | × | × | × | × | × |
| | LCD-A50XS1000 | ○ | ○ | ○ | ○ | ○ | ○ | × | × |
| 42 | LDT422V-P | × | × | × | ○ | × | ○※1 | × | × |
| | MDT421S | × | × | × | ○ | × | ○※1 | × | × |
| 40 | DSM-40L7 | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| | DSM-40L8 | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| | DSM-40U9-SL | ○ | ○ | ○ | × | × | × | ○ | ○ |
| | LCD-40ML7 | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| | LCD-40ML8H | × | × | × | × | × | × | × | × |
| | LCD-A40BHR7 | × | × | × | × | × | × | × | × |
| | LCD-A40BHR8 | × | × | × | × | × | × | × | × |
| | LCD-A40BHR9 | × | × | × | × | × | × | × | × |
| | LCD-A40MD9 | × | × | × | × | × | × | × | × |
| | LCD-A40RA1000 | × | × | × | × | × | × | × | ○ |
| | LCD-A40RA2000 | × | × | × | × | × | × | × | × |
| LCD-A40XS1000 | × | × | × | × | × | × | ○ | ○ | |
| 39 | LCD-39LSR6 | × | × | × | × | × | × | × | × |
| | LCD-A39BHR6 | × | × | × | × | × | × | × | × |
| 37 | LCD-37F4500WX | × | × | × | × | × | × | ○ | |
| 32 | DSM-32L7 | × | × | × | ○※1 | × | ○※1 | ○ | ○ |
| | DSM-32L8 | × | × | × | ○※1 | × | ○※1 | ○ | ○ |
| | LCD-32CB2 | ○ | ○ | ○ | ○ | × | ○ | ○ | ○ |
| | LCD-32LB3 | ○ | ○ | ○ | ○ | × | ○ | ○ | ○ |
| | LCD-32LB7 | × | × | × | ○※1 | × | ○※1 | ○ | ○ |
| | LCD-32LB8 | × | × | × | × | × | × | × | × |
| | LCD-A32BHR6 | × | × | × | × | × | × | × | × |
| | LCD-A32BHR7 | × | × | × | × | × | × | × | × |
| | LCD-A32BHR8 | × | × | × | × | × | × | × | × |
| LCD-A32BHR9 | × | × | × | × | × | × | × | × | |
| 24 | DSM-24L7 | × | × | × | × | × | × | ○ | ○ |
| | LCD-24LB7 | × | × | × | × | × | × | ○ | ○ |
| 19 | DSM-19L7 | × | × | × | × | × | × | ○ | ○ |
| | LCD-19LB7 | × | × | × | × | × | × | ○ | ○ |

※1 ネジが付属しておりません
取り付けネジが別途必要です。(M4など)