









 






# NEC社製 壁掛け金具対応表

2024/2/1

掲載がないテレビ型番については、対応確認をいたしますのでお問い合わせください

サイズ (型)	テレビ型式	EEX-TVKA003	EEX-TVKA008	EEX-TVKA016	EEX-TVKA020WH	EEX-TVKA022	EEX-TVKA023	EEX-TVKA024	EEX-TVKA025	EEX-TVKA026	EEX-TVKA027	EEX-TVKA028	EEX-TVKA030	EEX-TVKA031BK	EEX-TVKA013/015	EEX-LA024/025
		32~65型	27~55型	32~65型	32~70型	42~80型	~43型	32~75型	37~70型	32~55型	55~80型	32~65型	42~100型	49型まで	43型まで	15~43型
86	LCD-E868	x	x	x	x	x	x	x	x	x	x	x	○	x	x	x
	LCD-V864Q	x	x	x	x	x	x	x	x	x	x	x	○	x	x	x
84	LCD-X841UHD	x	x	x	x	x	x	x	x	x	x	x	○	x	x	x
	LCD-X841UHD-2	x	x	x	x	x	x	x	x	x	x	x	○	x	x	x
80	LCD-E805	x	x	x	x	○	x	x	x	x	○	x	○	x	x	x
	LCD-P801	x	x	x	x	○	x	x	x	x	○	x	○	x	x	x
75	LCD-C751Q	x	x	x	x	○	x	○	x	x	○	x	○	x	x	x
	LCD-V754Q	x	x	x	x	○	x	○	x	x	○	x	○	x	x	x
70	LCD-E705	x	x	x	x	○	x	○	x	x	○	x	○	x	x	x
	LCD-P703	x	x	x	x	○	x	○	x	x	○	x	○	x	x	x
65	LCD-E656	○	x	○	○	○	x	○	○	x	○	x	○	x	x	x
	LCD-E657Q	○	x	○	○	○	x	○	○	x	○	x	○	x	x	x
	LCD-V652	○	x	○	○	○	x	○	○	x	○	x	○	x	x	x
	LCD-V652-TM	○	x	○	○	○	x	○	○	x	○	x	○	x	x	x
	LCD-V654Q	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
	LCD-X651UHD	x	x	x	○	○	x	○	○	x	○	x	○	x	x	x
55	LCD-X651UHD-2	x	x	x	○	○	x	○	○	x	○	x	○	x	x	x
	LCD-E556	○	○	○	○	○	x	○	○	○	○	x	○	x	x	x
	LCD-E557Q	○	○	○	○	○	x	○	○	○	○	x	○	x	x	x
	LCD-E558	○	○	○	○	○	x	○	○	○	○	x	○	x	x	x
	LCD-P551	x	x	x	○	○	x	○	○	○	○	x	○	x	x	x
	LCD-P553	○	○	○	○	○	x	○	○	○	○	x	○	x	x	x
	LCD-UN551S	○	○	○	○	○	x	○	○	○	○	x	○	x	x	x
	LCD-UN551VS	○	○	○	○	○	x	○	○	○	○	x	○	x	x	x
	LCD-V552-N2	○	○	○	○	○	x	○	○	○	○	x	○	x	x	x
	LCD-V554Q	○	○	○	○	○	x	○	○	○	○	x	○	x	x	x
	LCD-X551UHD	○	○	○	○	○	x	○	○	○	○	x	○	x	x	x
	LCD-X551UN	x	x	○	○	○	x	○	○	○	○	x	○	x	x	x
	LCD-X552S	x	x	○	○	○	x	○	○	○	○	x	○	x	x	x
	LCD-X554HB	○	○	○	○	○	x	○	○	○	○	x	○	x	x	x
	LCD-X554UN	○	○	○	○	○	x	○	○	○	○	x	○	x	x	x
	50	LCD-E505	○	○	○	○	○	x	○	○	○	x	x	○	x	x
LCD-E506		○	○	○	○	○	x	○	○	○	x	x	○	x	x	x
LCD-E507Q		○	○	○	○	○	x	○	○	○	x	x	○	x	x	x

サイズ (型)	テレビ型式	EEX-TVKA003	EEX-TVKA008	EEX-TVKA016	EEX-TVKA020WH	EEX-TVKA022	EEX-TVKA023	EEX-TVKA024	EEX-TVKA025	EEX-TVKA026	EEX-TVKA027	EEX-TVKA028	EEX-TVKA030	EEX-TVKA031BK	EEX-TVKA013/015	EEX-LA024/025
		32~65型	27~55型	32~65型	32~70型	42~80型	~43型	32~75型	37~70型	32~55型	55~80型	32~65型	42~100型	49型まで	43型まで	15~43型
																
47	LCD-X474HB	○	○	○	○	○	×	○	○	○	×	×	○	×	×	×
46	LCD-P463	○	○	○	○	○	×	○	○	○	×	×	○	×	×	×
	LCD-V463-N2	○	○	○	○	○	×	○	○	○	×	×	○	×	×	×
	LCD-X462HB	○	○	○	○	○	×	○	○	○	×	×	○	×	×	×
	LCD-X462S	○	○	○	○	○	×	○	○	○	×	×	○	×	×	×
	LCD-X463UN	○	○	○	○	○	×	○	○	○	×	×	○	×	×	×
	LCD-X464UN	○	○	○	○	○	×	○	○	○	×	×	○	×	×	×
	LCD-X464UNS	○	○	○	○	○	×	○	○	○	×	×	○	×	×	×
	LCD-X464UNV	○	○	○	○	○	×	○	○	○	×	×	○	×	×	×
43	LCD-C431	○	○	○	○	○	○	○	○	○	×	×	○	×	×	×
	LCD-E436	○	○	○	○	○	○	○	○	○	×	×	○	○※3-3	×	×
	LCD-E437Q	○	○	○	○	○	○	○	○	○	×	×	○	○※3-2	×	×
	LCD-E425	○	○	○	○	○	○	○	○	○	×	×	○	○※3-2	×	×
42	LCD-E425	○	○	○	○	○	○	○	○	○	×	×	○	○※3-2	○	○
	LCD-V422	○	×	○	○	○	○	×	○	○	×	×	○	×	×	×
	LCD-V423-N2	○	×	○	○	○	○	○	○	○	×	×	○	×	×	×
40	LCD-M401	○	○	○	○	×	○	○	○	○	×	×	×	×	×	×
	LCD-X401S	○	○	○	○	×	○	○	○	○	×	×	×	×	×	×
	LCD-X401S-N	○	○	○	○	×	○	○	○	○	×	×	×	×	×	×
	LCD-X401S-N2	○	○	○	○	×	○	○	○	○	×	×	×	×	×	×
32	LCD-E325	×	×	○※1	×	×	○※1	×	×	×	×	×	×	○	○	○
	LCD-E326	×	×	○※1	×	×	○※1	×	×	×	×	×	×	○	○	○
	LCD-E327	×	×	○※1	×	×	○※1	×	×	×	×	×	×	○	○	○
	LCD-E328	×	×	○※1	×	×	○	×	×	×	×	×	×	○	×	○
	LCD-PA322UHD-2-BK	×	×	○※1	×	×	○※1	×	×	×	×	×	×	○	×	○
	LCD-V323-2	○	○	○	×	×	×	×	×	×	×	×	×	○※3-2	○	○

※1 ネジが付属していません  
 取り付けネジが別途必要です。(M4など)  
 ※2 縦向き設置のみ可能

※3-2 別途変換金具 EEX-VESATF02 が必要です  
 テレビを取付のネジは別途必要な場合があります。  
 ※3-3 別途変換金具 EEX-VESATF03 が必要です  
 テレビを取付のネジは別途必要な場合があります。