

サイズ (型)	テレビ型式	EEX-TVKA003	EEX-TVKA008	EEX-TVKA016	EEX-TVKA020WH	EEX-TVKA022	EEX-TVKA023	EEX-TVKA024	EEX-TVKA025	EEX-TVKA026	EEX-TVKA027	EEX-TVKA028	EEX-TVKA030	EEX-TVKA032	EEX-TVKA033	EEX-TVKA034	EEX-TVKA013/015	EEX-LA024/025	
		32~65型	27~55型	32~65型	32~70型	40~85型	~50型	32~75型	32~75型	32~65型	50~85型	32~65型	42~100型	37~70型	~100型	32~65型	43型まで	15~43型	
																			
60	LC-60XL9	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	LC-60Z5	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	LC-60Z9	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	PN-E601	x	x	x	○	○	x	○	x	○	x	○	○	○	○	x	x	x	
	PN-E603	x	x	○	○	○	x	○	○	x	○	○	○	○	○	x	x	x	
	PN-HM651	○	x	○	○	○	x	○	○	x	○	○	○	○	○	○	x	x	
	PN-L601B	x	x	x	x	x	x	○	x	x	x	x	x	x	x	x	x	x	
	PN-L602B	x	x	x	x	x	x	○	x	x	x	x	x	x	x	x	x	x	
	PN-R603	○	x	○	○	○	x	○	○	x	○	○	○	○	○	x	x	x	
PN-R606	○	x	○	○	○	x	○	○	x	○	○	○	○	○	x	x	x		
58	LC-58U30	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
55	4T-C55AJ1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55BL1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55CH1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55CL1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55CN1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55CQ1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55DN1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55DP1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55DQ1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55DQ2	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55DS1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55EP1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55EQ1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55ES1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55FN1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55FN2	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55FQ1	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
	4T-C55FS1	○	○	○	○	○	x	○	○	○	○	○	○	○	○	○	○	x	x
	4T-C55GL1	○	x	○	x	○	x	○	○	○	○	○	○	○	○	○	○	x	x
	4T-C55GN1	○	x	○	x	○	x	○	○	○	○	○	○	○	○	○	○	x	x
	4T-C55GN2	○	x	○	x	○	x	○	○	○	○	○	○	○	○	○	○	x	x
	4T-C55GP1	○	x	○	○	○	x	○	○	○	○	○	○	○	○	○	○	x	x
	4T-C55GQ1	○	x	○	○	○	x	○	○	○	○	○	○	○	○	○	○	x	x
	4T-C55GQ3	○	x	○	○	○	x	○	○	○	○	○	○	○	○	○	○	x	x
	4T-C55GS1	○	x	○	○	○	x	○	○	○	○	○	○	○	○	○	○	x	x
	LC-55U30	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
	LC-55U40	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
	LC-55U45	○	○	○	○	○	x	○	○	○	○	○	○	○	○	○	○	x	x
	LC-55UH5	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
	LC-55US40	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
	LC-55US45	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
	LC-55US5	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
	LC-55W30	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
LC-55W35	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
LC-55XD45	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
PN-HW551	○	○	○	○	○	x	○	○	○	○	○	○	○	○	○	○	x	x	
PN-U553	○	○	○	○	○	x	○	○	○	○	○	○	○	○	○	○	x	x	
PN-Y555	○	○	○	○	○	x	○	○	○	○	○	○	○	○	○	x	x	x	
PN-Y556	○	x	○	○	○	x	○	○	○	○	○	○	○	○	○	x	x	x	

サイズ (型)	テレビ型式	EEX-TVKA003	EEX-TVKA008	EEX-TVKA016	EEX-TVKA020WH	EEX-TVKA022	EEX-TVKA023	EEX-TVKA024	EEX-TVKA025	EEX-TVKA026	EEX-TVKA027	EEX-TVKA028	EEX-TVKA030	EEX-TVKA032	EEX-TVKA033	EEX-TVKA034	EEX-TVKA013/015	EEX-LA024/025
		32~65型	27~55型	32~65型	32~70型	40~85型	~50型	32~75型	32~75型	32~65型	50~85型	32~65型	42~100型	37~70型	~100型	32~65型	43型まで	15~43型
																		
42	PN-R426	○	○	○	○	○	○	○	○	○	×	○	○	○	○	○	×	×
	PN-Y425	○	○	○	○	○	○	○	○	○	×	○	○	○	○	○	×	×
40	2T-B40AB1	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	2T-C40AE1	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	2T-C40BE1	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	4T-C40AJ1	○	○	○	○	○	○	×	○	○	×	×	×	×	×	○	×	○
	4T-C40BH1	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	○	○
	4T-C40BJ1	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	○	○
	4T-C40CL1	○	○	×	×	×	○	×	×	×	×	×	×	×	×	○	×	○
40	LB-T401	○	○	×	×	×	○	×	×	×	×	×	×	×	×	○	○	○
	LC-40AE6	○	○	○	○	○	○	○	○	○	×	○	×	○	○	○	×	×
	LC-40AE7	○	○	○	○	○	○	×	○	○	×	×	×	○	○	○	×	×
	LC-40AJ1	○	○	○	○	○	○	○	○	○	×	×	×	×	○	○	×	○
	LC-40BH11	×	○※1	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-40BH30	×	○※1	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-40DR9	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	LC-40DS6	○	○	○	○	○	○	○	○	○	×	○	×	○	○	○	×	×
	LC-40DX2	○	×	×	○	×	×	×	×	×	×	×	×	×	×	○	×	×
	LC-40E40	○	×	○	×	×	×	×	×	×	×	×	×	×	○	○	×	×
	LC-40E9	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	LC-40G7	○	×	○	×	○	×	×	○	○	×	×	×	×	○	○	×	×
	LC-40G9	○	×	○	×	○	×	○	○	○	×	×	×	×	○	○	×	×
	LC-40H11	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-40H20	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-40H30	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-40H40	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-40H9	○	×	×	×	○	×	×	○	○	×	×	×	×	×	○	×	×
	LC-40HW10	○	×	×	○	○	×	×	○	○	×	×	×	×	×	○	×	×
	LC-40HW20	○	○	×	○	○	○	×	○	○	×	×	×	×	×	○	×	○
	LC-40HW35	○	○	×	○	○	○	×	○	○	×	×	×	×	×	○	×	○
	LC-40J10	○	×	×	×	○	×	×	○	○	×	×	×	×	×	○	×	×
	LC-40LV3	○	×	×	×	×	×	×	×	×	×	×	×	×	×	○	×	×
	LC-40LX3	○	×	×	×	×	×	×	×	×	×	×	×	×	×	○	×	×
	LC-40R30	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	LC-40S5	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-40SE1	○	○	○	○	○	○	×	○	○	×	×	×	×	×	○	×	×
	LC-40U20	○	○	×	○	○	○	×	○	○	×	×	×	×	×	○	×	○
	LC-40U30	○	○	×	○	○	○	×	○	○	×	×	×	×	×	○	×	○
	LC-40U40	○	○	×	○	○	○	×	○	○	×	×	×	×	×	○	×	○
	LC-40U45	○	○	×	○	○	○	×	○	○	×	×	×	×	×	○	×	○
	LC-40V5	○	×	×	×	×	×	×	×	×	×	×	×	×	×	○	×	×
	LC-40V7	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	LC-40W20	○	×	×	○	○	×	×	○	○	×	×	×	×	×	○	×	○
LC-40W35	○	×	×	×	×	×	×	×	×	×	×	×	×	×	○	×	○	
LC-40W5	○	○	○	○	○	○	○	○	○	×	×	×	×	○	○	○	○	
LC-40Z5	○	×	○	×	○	×	×	○	○	×	×	×	×	×	○	×	×	
PN-B401	○	○	○	○	○	○	○	○	○	×	○	×	○	○	○	×	×	
PN-M401	○	○	○	○	○	○	○	○	○	×	○	×	○	○	○	×	×	
37	LC-37DS5	○	○	○	×	×	○	○	○	○	×	○	×	×	○	×	×	
	LC-37ES50	○	○	○	×	×	○	○	○	○	×	○	×	×	○	×	×	

サイズ (型)	テレビ型式	EEX-TVKA003	EEX-TVKA008	EEX-TVKA016	EEX-TVKA020WH	EEX-TVKA022	EEX-TVKA023	EEX-TVKA024	EEX-TVKA025	EEX-TVKA026	EEX-TVKA027	EEX-TVKA028	EEX-TVKA030	EEX-TVKA032	EEX-TVKA033	EEX-TVKA034	EEX-TVKA013/015	EEX-LA024/025
		32~65型	27~55型	32~65型	32~70型	40~85型	~50型	32~75型	32~75型	32~65型	50~85型	32~65型	42~100型	37~70型	~100型	32~65型	43型まで	15~43型
																		
							縦設置専用											
37	LC-37EX5	○	○	○	×	×	○	○	○	○	×	○	×	×	○	○	×	×
	LC-37GS10	○	○	○	○	×	○	○	○	○	×	○	×	×	○	○	×	×
	LC-37GX3W	○	○	○	×	×	○	○	○	○	×	○	×	×	○	○	×	×
	LC-37GX5	○	○	○	×	×	○	○	○	○	×	○	×	×	○	○	×	×
32	2T-C32AE1	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	2T-C32DE	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	2T-C32EF1	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	2T-C32GE1	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-32BD1	○	○	○	○	×	○	○	×	○	×	○	×	×	○	○	×	○
	LC-32BH11	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-32BH30	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-32D10	○	○	○	○	×	○	○	×	○	×	○	×	×	○	○	×	○
LC-32D30	○	○	○	○	×	○	○	×	○	×	○	×	×	○	○	×	○	
32	LC-32DE5	○	○	○	○	×	○	○	×	○	×	○	×	×	○	○	○	○
	LC-32DR3	○	○	○	○	×	○	×	×	○	×	×	×	○	○	○	○	○
	LC-32DX3	○	○	○	○	×	○	×	×	○	×	×	×	○	○	○	×	○
	LC-32E40	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-32E7	○	○	○	○	×	○	○	×	○	×	○	×	×	○	○	×	○
	LC-32E8	○	○	○	○	×	○	○	×	○	×	○	×	×	○	○	○	○
	LC-32ES	○	○	○	○	×	○	×	×	○	×	×	×	×	○	○	×	○
	LC-32F3	○	○	○	○	×	○	×	×	○	×	×	×	×	○	○	○	○
	LC-32F5	○	○	○	○	×	○	×	×	○	×	×	×	×	○	○	○	○
	LC-32GH1	○	○	○	○	×	○	○	×	○	×	○	×	×	○	○	×	×
	LC-32H11	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-32H20	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-32H30	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-32H40	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-32H9	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-32J10	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-32J9	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-32R30	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	LC-32R5	○	○	○	○	×	○	×	○	○	×	×	×	×	○	○	○	○
	LC-32S5	×	○※1	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-32SC1	○	○	○	○	×	○	×	×	○	×	×	×	×	○	○	○	○
	LC-32V5	○	○	×	×	×	○	×	×	×	×	×	×	×	×	×	○	○
	LC-32W25	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-32W5	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
PN-Y326	○	○	○	○	×	○	○	×	○	×	○	×	×	○	○	○	○	
PN-Y326B	○	○	○	○	×	○	○	×	○	×	○	×	×	○	○	○	○	
24	2T-C24AD	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-24P5	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
22	2T-C22AD	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-22K45	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
19	2T-C19AD	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○
	LC-19P5	×	×	×	×	×	○※1	×	×	×	×	×	×	×	×	×	○	○

※1 ネジが付属しておりません
取り付けネジが別途必要です。(M4など)

※2 縦向き設置のみ可能

※3-2 別途変換金具 EEX-VESATF02 が必要で
テレビを取付のネジは別途必要な場合があります。

※3-3 別途変換金具 EEX-VESATF03 が必要で
テレビを取付のネジは別途必要な場合があります。

※4 ブラケットがテレビ下部よりはみ出す可能性があります。